HOME DECORATORS
collection®

BF-24676 MSL GIFT-WRAP HUTCH 32"Hx42"W

ASSEMBLY INSTRUCTIONS

Made In China

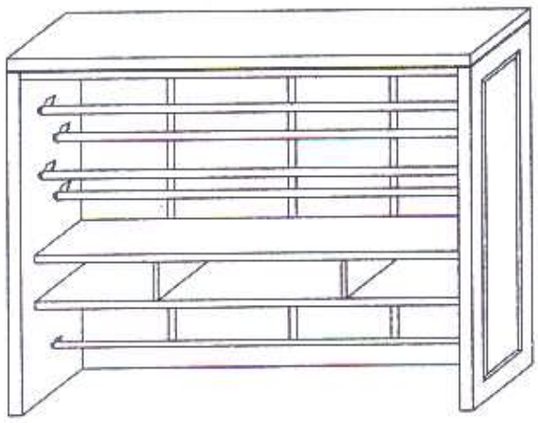

Thank you for purchasing this quality product.Be sure to check all packing material carefully for small parts,which may have came loose inside the carton during shipment. Count all parts and material hardware,Compare with parts list to be sure all part are present.If any parts are missing or damaged,phone,fax,or mail to our Customer Service Department.For efficient and speedy service please indicate the model number and code letter of part(s)need

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast,easy and correct assembly.

# PARTS LIST

| | | |
|---|---|---|
| A TOP PANEL-1PC | B 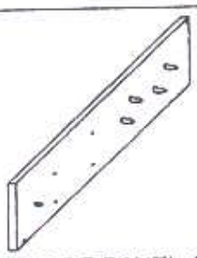 LEFT SIDE PANEL-1PC | C 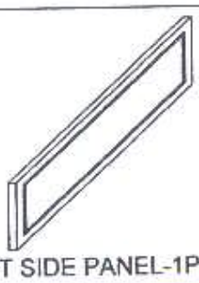 RIGHT SIDE PANEL-1PC |
| D BACK PANEL-2PCS | E BACK PANEL-2PCS | F REAR PANEL GUIDE-3PCS |
| G ADORNING PANEL-1PC | H PANEL-1PC | I ACROSS PANEL UP-1PC |
| J ACROSS PANEL DOWN-1PC | K  STAND PANEL-2PCS | L CIRCINAL IRON -1PC |

| | | |
|---|---|---|
| M 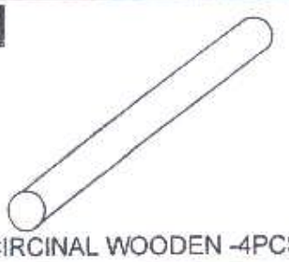 CIRCINAL WOODEN -4PCS | N  CAM-BOLTS-24PCS | O CAM-LOCKS-24PCS |
| P SCREWS-3PCS | Q SCREWS-9PCS | R SCREWS-40PCS |
| S CAM-TOOL-1PC | T CAM-LOCKS CAP-16PCS | U EVA MAT-4PCS |
| V SCREWS-2PCS | W  HOOK-2PCS | X SCREWS-2PCS |
| Y HANGER-2PCS | Z DOWEL-2PCS | A1 PLATE-2PCS |
| | | |

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT.IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY,PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

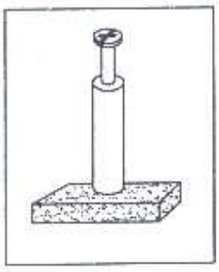

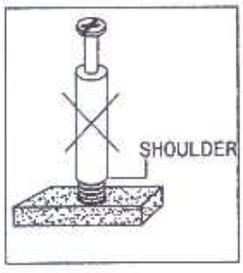


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

## HOW TO USE THE CAM-TOOL

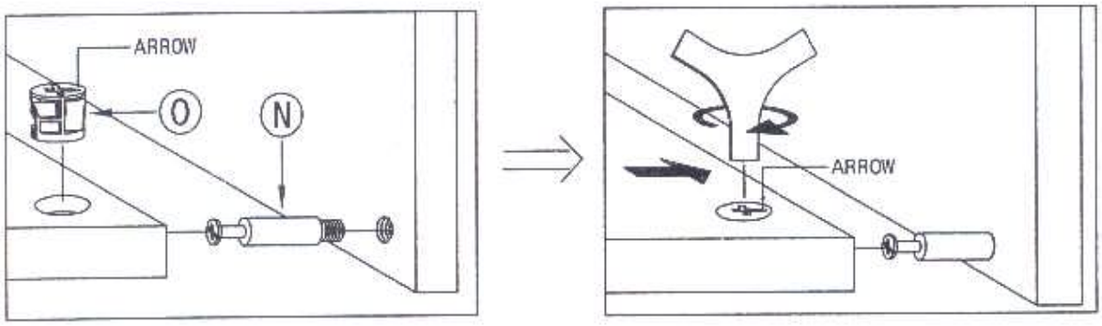


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

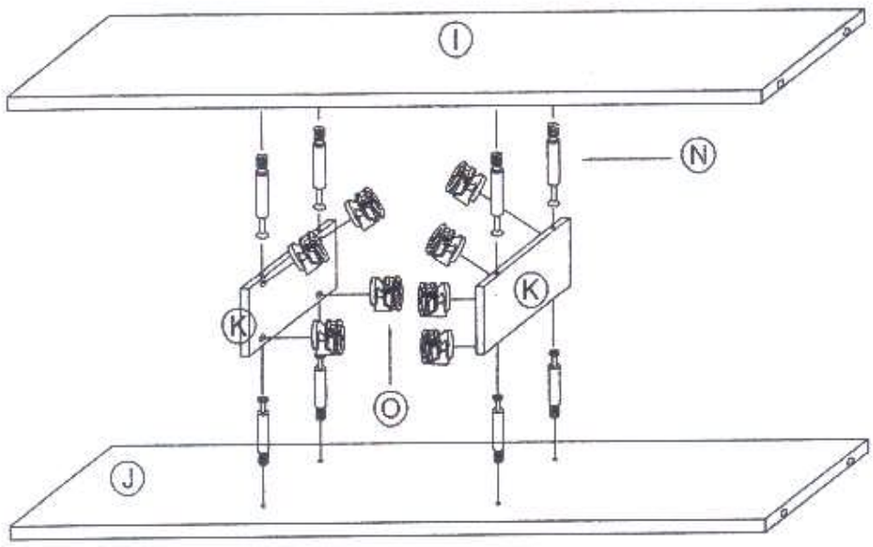


1). ASSEMBLE THE ACROSS PANEL (I/J).

- ROTATE THE 8 CAM-BOLTS(N) INTO HOLES IN ACROSS PANEL(I/J).
- PLACE THE CAM-BOLTS(N)INTO HOLES IN SIDE PANELS(K) AND USING 8 CAM-LOCKS(O).

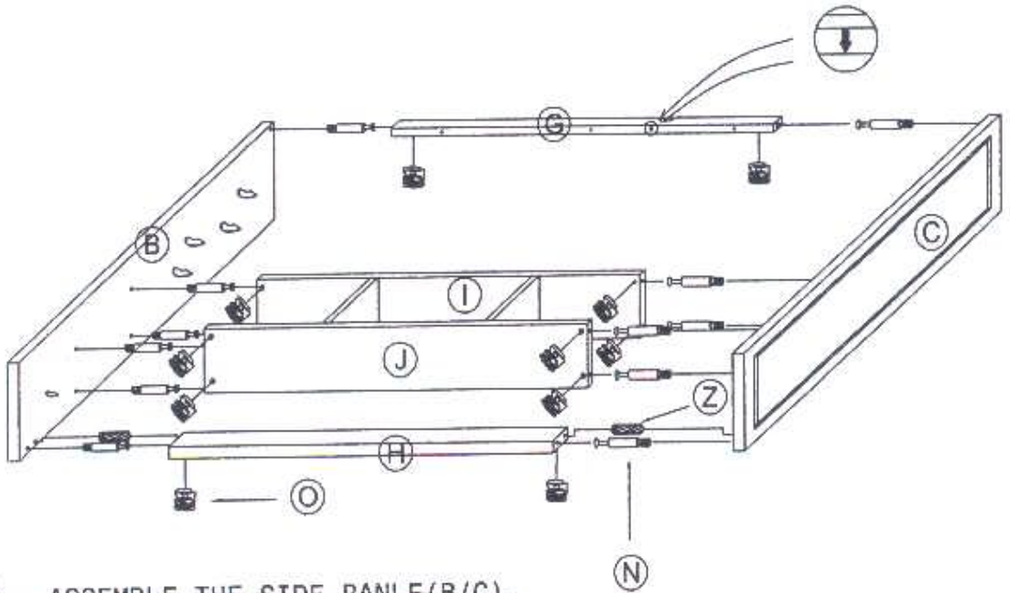


2). ASSEMBLE THE SIDE PANLE(B/C).

- ROTATE THE 12 CAM-BOLTS(N)AND INSERT THE 2 DOWEL(Z)INTO HOLES IN SIDE PANLE (B/C).
- PLACE THE CAM-BOLTS(N)INTO HOLES IN PANELS(G/I/J/H)AND USING 12 CAM-LOCKS(O).

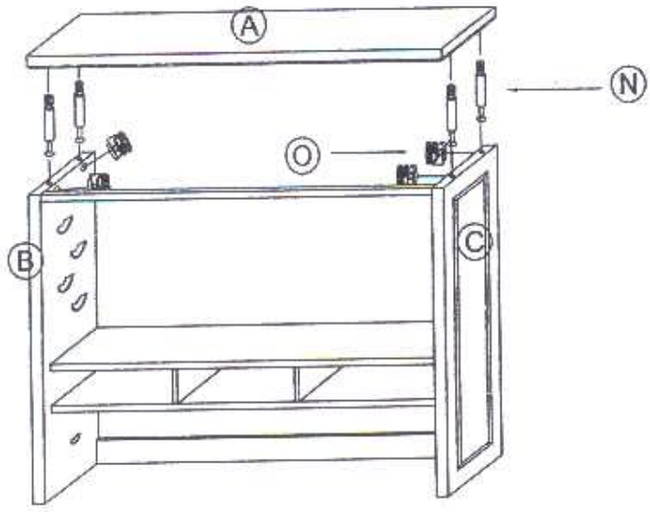


3). ASSEMBLE THE TOP PANEL(A).

- ROTATE THE 4 CAM-BOLTS(N) INTO HOLES IN TOP PANEL(A).
- PLACE THE CAM-BOLTS(N)INTO HOLES IN SIDE PANEL(B/C) AND USING 4 CAM-LOCKS(O).

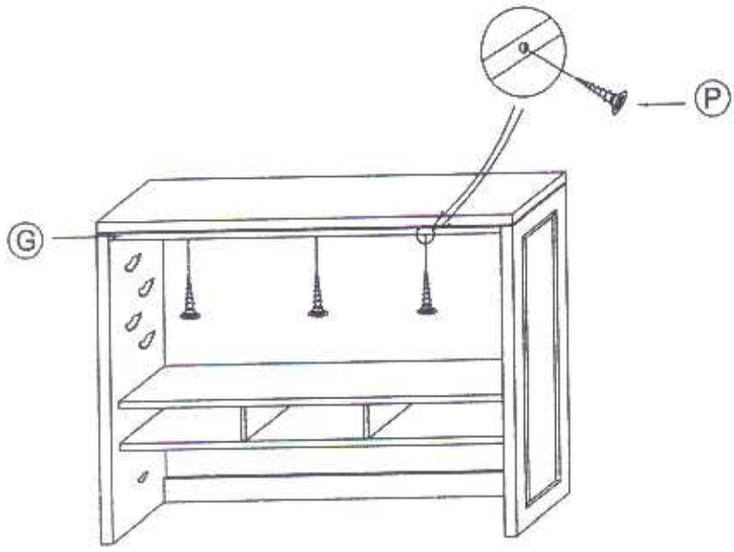


4). ASSEMBLE THE SCREWS(P).

- ROTATE THE 3 SCREWS(P) INTO HOLES IN ADORNING PANEL(G).

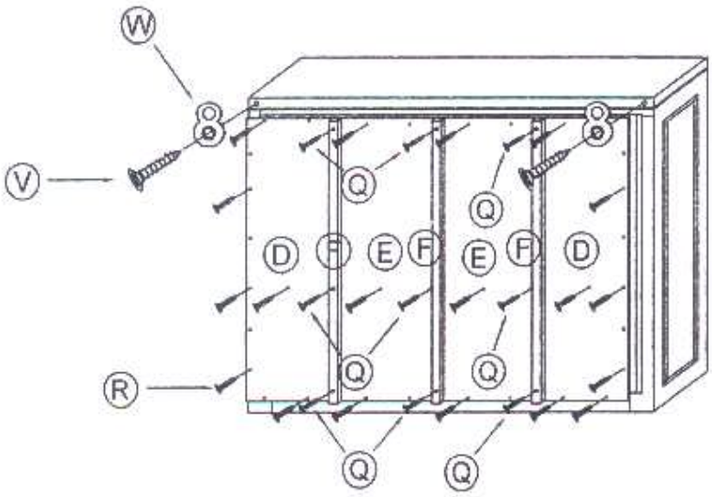


## 5). ASSEMBLE BACK PANEL(D/E).

- INSERT THE 4 BACK PANEL(D/E)IN INTO SLOTS IN REAR PANEL GUIDE(F).
- ATTACH BACK PANEL(D/E)AND REAR PANEL GUIDE(F)USING 32 SCREWS(R)AND 9 SCREWS(Q).
- ATTACH 2 HOOK(W)USING 2 SCREWS(V)IN THE PREDRILLED HOLES OF REAR TOP PANEL.

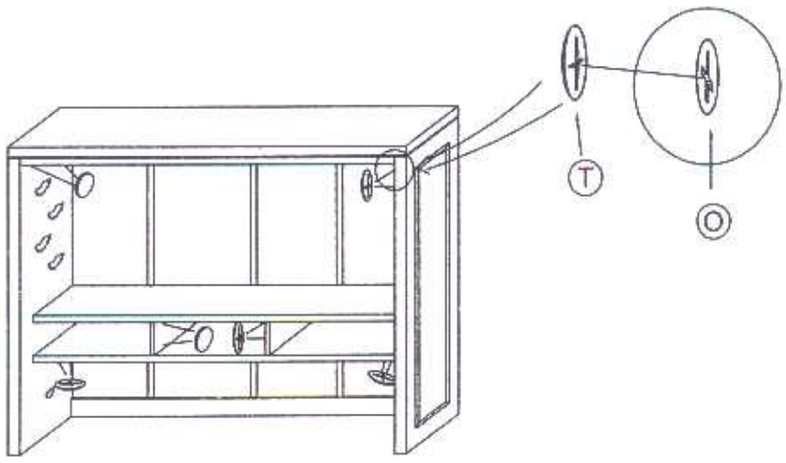


## 6). ASSEMBLE CAM-LOCKS CAP(T).

- ATTACH THE 16 CAM-LOCKS(O)USING 16 CAM-LOCKS CAP(T).

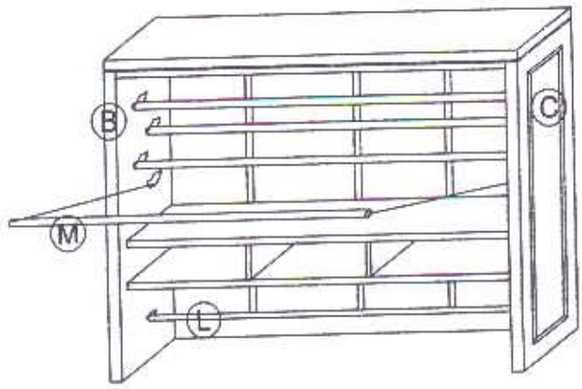


7). ASSEMBLE CIRCINAL WOODEN/IRON(L/M).

- INSERT THE 4 CIRCINAL WOODEN(M) AND CIRCINAL IRONS(L)INTO HOLES IN SIDE PANEL (B/C).
  WHEN INSTALLED,PLS PUT THE CIRCINAL WOODEN/IRON(L/M)IN IT FROM THE RIGHT SIDE PANEL(C),THEN PUT IT INTO THE LEFT SIDE PANEL(B).WHEN DISMANTLED,PLSREMOVE THE LEFT SIDE PANEL(B).

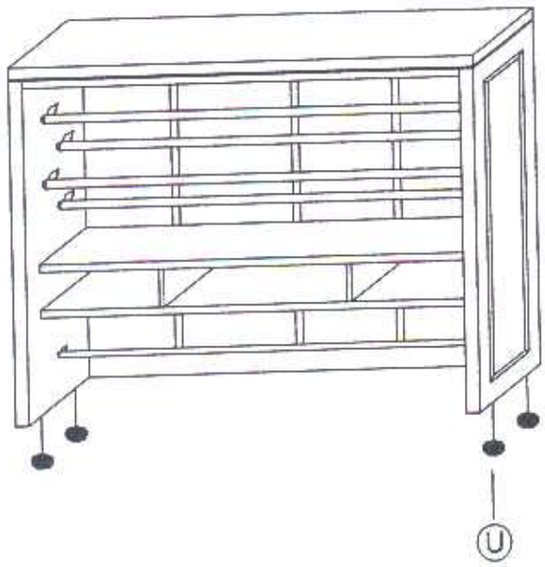


8). ASSEMBLE THE EVA MAT(U).

- ATTACH 4 EVA MATS(U) INTO THE SIDE PANEL(B/C).

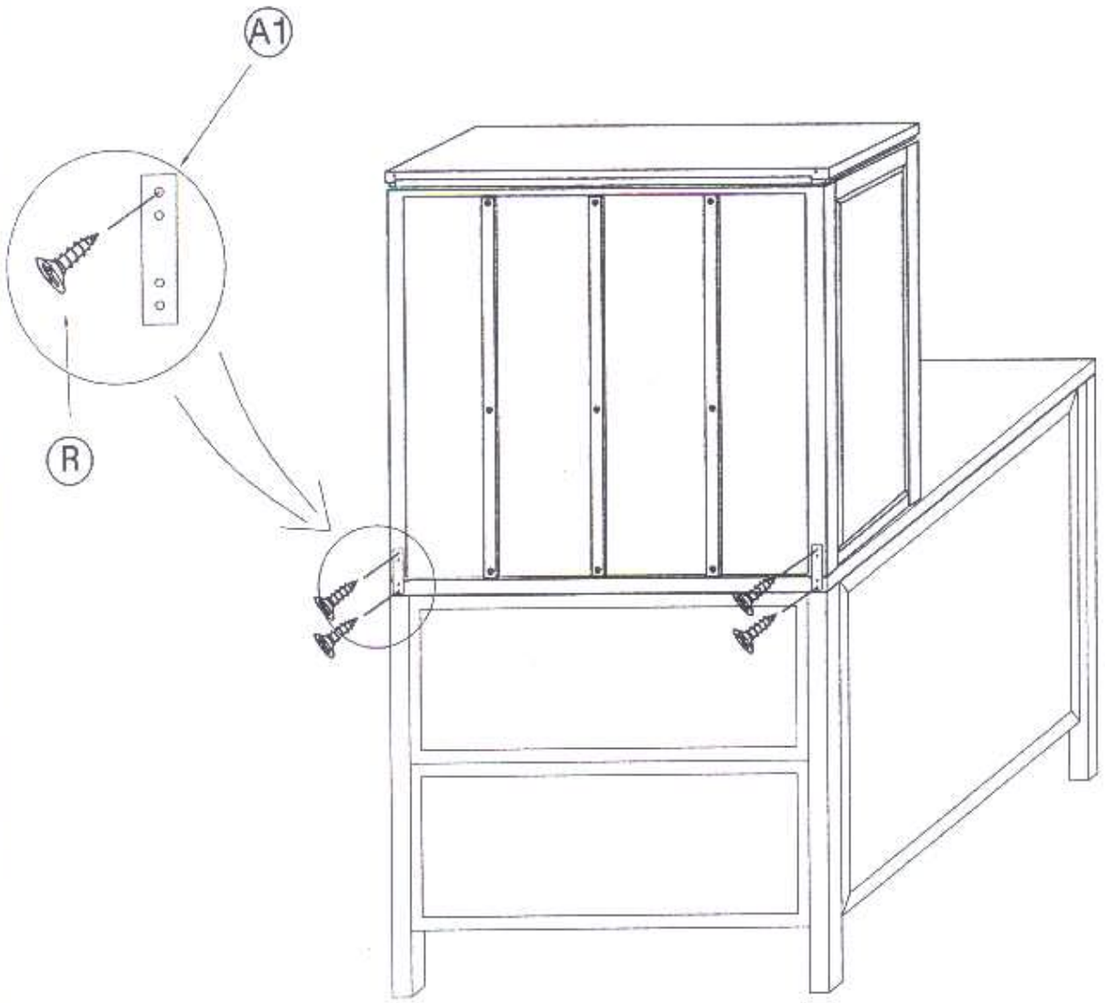


9).ASSEMBLE THE PLATE(A1).

• ATTACH THE PLATE(A1)TO SIDE PANEL(B/C)USING 8 SCREWS(R).

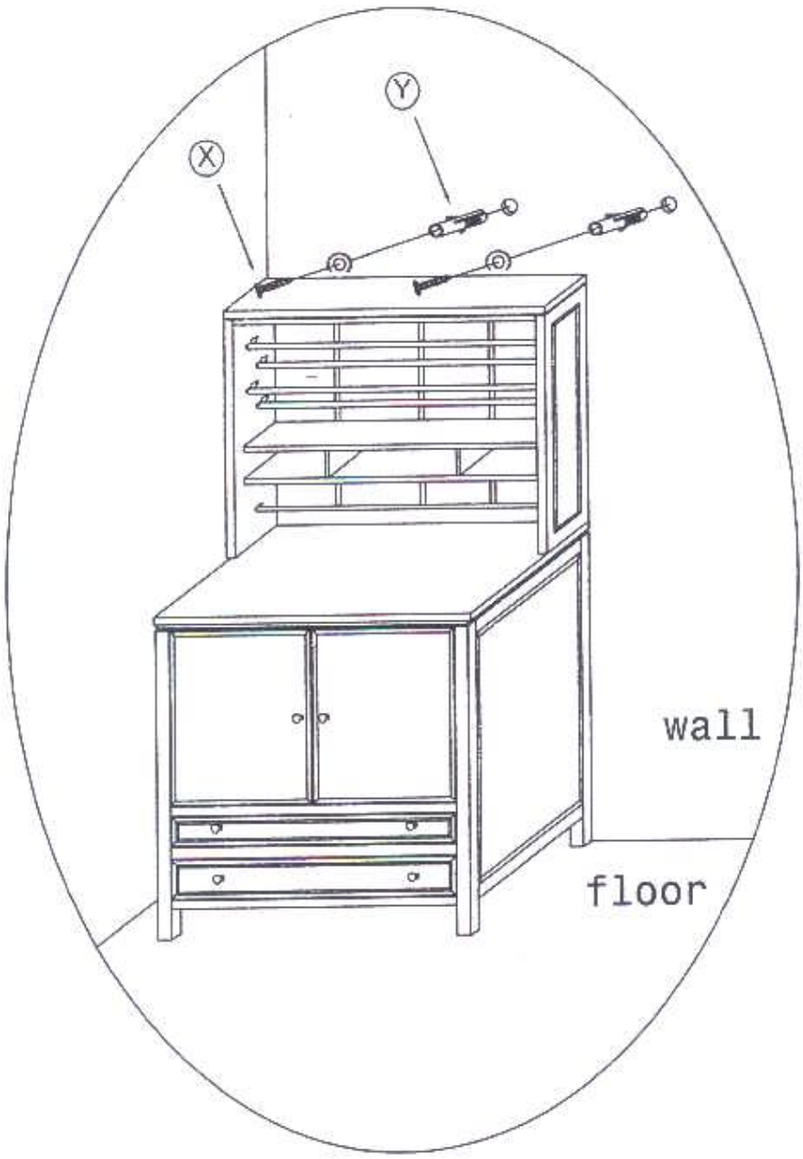


10) .ASSEMBLE THE HANGER(Y).

- DRILLING 2 HOLES ON THE WALL IT AS BETWEEN TOP PANEL HOLES DISTANCE.
- PUT 2 HANGER(Y)HIT INTO HOLES IN WALL AND ROTATE 2 SCREWS(X)INTO HANGER(Y).